 


SJ2 / SJ3 / SK1D / SK4D SW Update Guide - Preparation

● Preparation

1. SJ2 / SJ3 / SK1D / SK4D Sound-bar (Main Unit)
2. SJ2 / SJ3 / SK1D / SK4D Remote Controller Unit
3. USB Memory
4. SW File



<Main Unit>
Necessary



 
<RCU>
Necessary



<USB Memory>
Necessary

<Software Download – Example>

1. [Website : http://www.lg.com](http://www.lg.com)
2. [Path : Support > Software&Drivers](#)
3. [Search your “model name”](#)
4. [And then pop-up window will be showed](#)
5. [Select the file and download it](#)

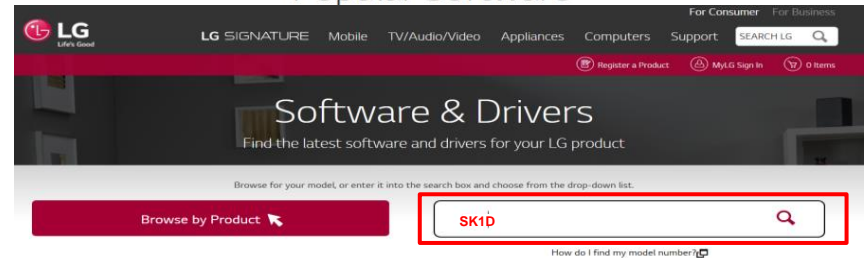

Software

Software upgrades include device drivers and firmware updates only for specific models. Check your owner's manual to determine if your product supports software upgrades.

Firmware update for SJ4Y (Version : 1704262)

(This is an example)

Software_download_guide(Eng)_20170428.pdf 330K ↓

04/28/2017

MICOM_SJ4_1704262_919D_rev3093.zip 75K ↓

04/28/2017

Reference ▼

Close

- ※ Take care not to power off during SW update
- ※ Do format USB memory before update (FAT32 file system)

SJ2 / SJ3 / SK1D / SK4D SW Update Guide - Update

LG Internal Use Only

Step 1. Prepare SJ2/SJ3/SK1D/SK4D Update SW. (Please check the downloaded "filename" like below by each model)


Update module	File name of each model
DSP	SJ2 : DSP_SJ2_1812070_MP_rev1608.ROM SJ3 : DSP_SJ3_1812070_MP_rev3175.ROM SK1D : DSP_SK1D_1812070_MP_rev1609.ROM SK4D : DSP_SK1D_1812070_MP_rev1609.ROM

Step 2. Copy SW file in the USB memory. (Do format USB as FAT32 file system before you copy)


Step 3. Power on SJ2 / SJ3 / SK1D / SK4D Main Unit.

Step 4. Press Function key to change function to USB

*** Please check if it was changed to USB Function or not**

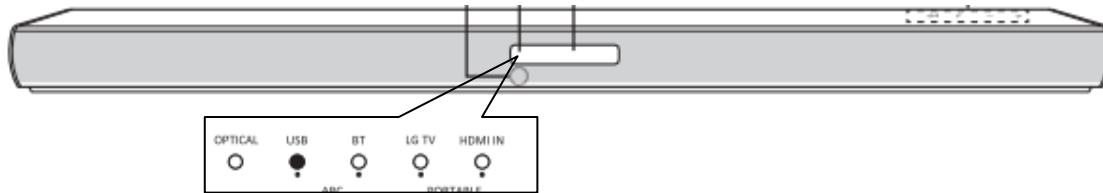 


 Step 5. Insert USB memory stick which has update software to the USB port at back of SJ2 / SJ3 / SK1D / SK4D sound-bar (main unit)

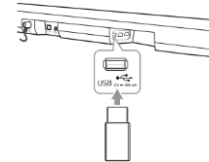

Step 6. Update will start automatically.

*** Check whether function LED blinks one by one to the right direction**

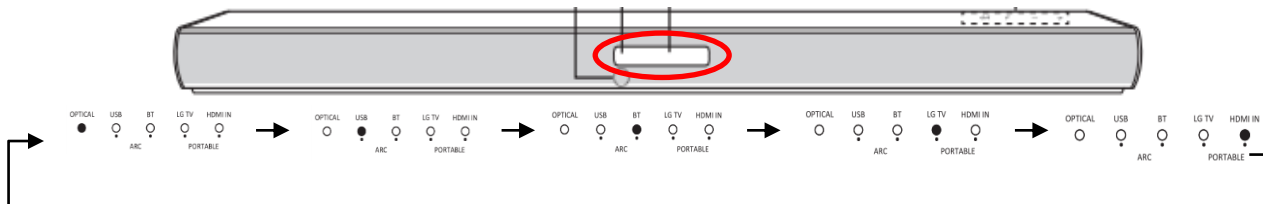 

Step 7. SJ2 / SJ3 / SK1D / SK4D main unit will be powered off automatically after update finish.